

# PREMIER 2-8-0 CONSOLIDATION STEAM ENGINE OPERATING INSTRUCTIONS



This Premier 2-8-0 Consolidation Steam Engine features a die-cast boiler and tender and operates on O-42 track. This Premier Steam Engine contains state-of-the-art electronics with many built-in automatic features for incredibly realistic operation. Despite these advanced features, the locomotive is easy to operate on an O-31 layout with any compatible standard AC transformer that is equipped with whistle and bell buttons (see the compatibility chart on page 20), and is compatible with most other 3-rail locomotives, rolling stock, and accessories.

This locomotive is equipped with Proto-Sound 2.0 with Digital Command System (DCS). This new system will allow you to operate your locomotive in Command mode (when used with the DCS Remote Control System, sold separately) or Conventional mode. Conventional operating features are described in the following pages, while the **DCS operating features are covered in the set of operating instructions that accompanies the DCS equipment.** Conventional Mode operation of this locomotive is much simpler than operation of original Proto-Sound engines. For your own safety and that of your equipment, please read the instructions before you operate this engine.

## Table of Contents

|   |    |
|---|----|
| <b>Set Up</b>   | 3  |
| <b>Basic Operation</b>                                    | 4  |
| Throttle  | 4  |
| Operation Buttons   | 4  |
| Manual Volume Control                                     | 4  |
| <b>Proto-Sound 2.0 Operating Instructions</b>             | 5  |
| Activating Proto-Sound 2.0 Conventional Mode Features     | 5  |
| Freight Yard Sounds (FYS)                                 | 6  |
| Tips on Using FYS   | 7  |
| Proto-Coupler <sup>®</sup> Operation                      | 8  |
| Speed Control   | 8  |
| Lock into a Direction                                     | 9  |
| Reset to Factory Defaults                                 | 9  |
| Automatic Sounds  | 9  |
| <b>Maintenance</b>  | 10 |
| ProtoSmoke Unit Operation                                 | 10 |
| Lubrication and Greasing Instructions                     | 12 |
| Traction Tire Replacement                                 | 13 |
| Light Replacement Instructions                            | 14 |
| Self-Charging Battery Back-Up                             | 16 |
| <b>Troubleshooting</b>                                    | 17 |
| <b>Compatibility</b>                                      | 19 |
| <b>Transformer Compatibility Chart</b>                    | 20 |
| <b>Additional Features with DCS Remote Control System</b> | 21 |
| <b>Safety Precautions</b>                                 | 23 |
| <b>Service and Warranty Information</b>                   | 24 |

# Set Up

There are a couple of simple steps you must take before operating this Premier steamer.

1. Although the engine was lubricated at the factory, you should lubricate all side rods, linkage components and pickup rollers to prevent them from squeaking. Use light household oil and follow the lubrication points marked “L” in Fig. 6 on pg. 12. Do not over-oil. Use only a drop or two on each pivot point
2. Prime the operating smoke unit with smoke fluid before operating. Add 15-20 drops of smoke fluid through the smokestack (see Fig. 3 on pg. 10), then gently blow into the stack to eliminate any air bubbles in the fluid.
3. If you choose not to prime the unit with fluid, turn the smoke unit switch located under the tender to the OFF position (see Fig. 4 on pg. 10). **Running the engine without a primed smoke unit may cause damage.** See the “ProtoSmoke Unit Operation” section of this book for more information on smoke unit maintenance.
4. Place the engine on the track, then insert the reverse unit plug that extends out of the tender into the receptacle at the back of the boiler cab (Figure 1a). **WARNING: DO NOT CONNECT THIS ENGINE TO A TENDER FROM ANOTHER ENGINE; IT MAY CAUSE SERIOUS DAMAGE.** Look at the bottom of the engine and tender where each will have a color-coded stamp. If they match you may connect those two pieces; if not, don't.

5. Connect the draw bar between the engine and tender. The draw bar hole located farthest from the tender is for applications such as display. The second hole is for normal operation on the track.

At this point, you are ready to begin running your engine.



*Figure 1a. Connect the Tender to the Engine*

# Basic Operation

**Throttle** – Throttle up the power to your track. Give about 10-14 volts or enough power so that the engine's headlight shines brightly. Then put the engine into motion by either firmly pressing the Direction button on your transformer or remote once or dropping and advancing the throttle to put the engine in forward.

## Operation Buttons

Use the operation buttons on your transformer or remote as described below.

**Whistle/Horn**- To sound the whistle, firmly press the Whistle/Horn button. The whistle will sound for as long as you continue to depress the button. It will stop when you release the button. The whistle has four different endings, depending on whether you hold the button for less than three seconds, three seconds, four seconds, or five seconds or longer.

**Bell** - To sound the bell, firmly press and release the Bell button. To turn the bell off, press and release the Bell button again. The bell will continue to ring from the time you turn it on until you press and release the button again to turn it off.

**Direction** – Your train is programmed to start in neutral. The first direction after neutral upon start-up is forward. Firmly press and release the Direction button to allow the engine to move forward. Just as you must stop your automobile between forward and reverse, this engine will not go directly from forward to reverse; it goes into neutral between directions. If the train has been moving forward, the first press of the Direction button will put the train from forward into neutral, the second press into reverse, the third press back into neutral, and the fourth back into forward. To prevent accidental high-speed start-ups, this engine is programmed to restart in neutral each time the track voltage is turned off for 25 seconds or more.

## Manual Volume Control

– To adjust the volume of all sounds made by this engine, turn the master volume control knob located under the tender clockwise to increase the volume and counter-clockwise to decrease the volume (see Fig. 2).



*Figure 2. Manually Adjusting the Proto-Sound 2.0 Volume*

# Proto-Sound 2.0 Operating Instructions

This manual contains the operating instructions for Proto-Sound 2.0 in conventional mode only. Instructions for accessing DCS command mode features accompany the DCS Remote Control System equipment.

Because Proto-Sound 2.0 is an all-new system developed by M.T.H.'s own research and development team, it operates differently from original Proto-Sound. Most Proto-Sound 2.0 features are automatically enabled, and the reset state has been eliminated, so there is no need to program features as with original Proto-Sound. Although the new system is easier to operate than original Proto-Sound, you should read these instructions thoroughly before using Proto-Sound 2.0 features in order to prevent harm to yourself or your equipment.

## Activating Proto-Sound 2.0 Conventional Mode Features:

Proto-Sound 2.0 features are activated by sequences of Bell and Whistle button pushes described below. Please read the full descriptions of each feature before using it. To use these buttons to activate features rather than to blow the whistle or ring the bell, you should press the buttons for a shorter time (1/2 second); you may need to practice your timing to make this work smoothly.

| FYS Code Timing               |              |                     |              |                     |
|-------------------------------|--------------|---------------------|--------------|---------------------|
| Tap Bell Quickly              | ½ Sec. Pause | Tap Whistle Quickly | ½ Sec. Pause | Tap Whistle Quickly |
| Total Time Lapse: 1 ½ Seconds |              |                     |              |                     |

| Feature to Be Activated:     | Button Code:                           |
|------------------------------|--|
| Freight Yard Sounds          | 1 Bell, 2 Whistles                     |
| Fire the Rear Coupler        | 1 Bell, 3 Whistles                     |
| Speed Control On/Off         | 1 Whistle, 2 Bells (from Neutral only) |
| Lock into a Direction/Unlock | 1 Whistle, 3 Bells                     |
| Reset to Factory Defaults    | 1 Whistle, 5 Bells (from Neutral only) |

## **Freight Yard Sounds (FYS):**

Your engine is equipped with a sound package of freight yard sounds that you can play when you pull into a yard. **Each sequence described below will play as long as it is left on, randomly generating sounds, but be sure to allow approximately 30 seconds between the button pushes described below to allow the FYS sufficient time to run through each sequence.**

1. To cue the sound system to play the FYS, quickly, but firmly tap the Bell button once followed by 2 quick taps of the Whistle button while the engine is moving. Tap the buttons quickly, but allow approximately ½ second between each press.
2. Press the Direction button or drop and advance the throttle once to stop the engine. This will trigger the first sequence of FYS. The reverse unit is temporarily disabled so that the train will not move as you use the Direction button to trigger the sounds, and Proto-Sound 2.0 has disabled operator control over the Whistle and Bell buttons until the full FYS sequence is complete.
3. After waiting about 30 seconds for that sequence to run, press the Direction button again to trigger the second sequence of FYS.
4. After about 30 seconds, press the Direction button again to trigger the third FYS sequence.
5. Again, after allowing about 30 seconds for that sequence to run, press the Direction button one more time to trigger the fourth and final FYS sequence. The FYS will continue, and within a few seconds, the engine will start and move out on its own at the current throttle setting, in the same direction it was traveling when you began the sequence with the bell ringing. Once the bell turns off, the operator regains control of the transformer's bell and whistle buttons and can ring the bell or blow the whistle as usual.

## **Tips on Using FYS**

- You can terminate FYS at anytime by turning off power to the track for 15 seconds.
- You do not have to be in Forward to use FYS. At the conclusion of the full sequence, the train will pull away from the station in whatever direction you were going when you activated the feature.
- You can use FYS even if you are double-heading with another engine. If the second engine is not equipped with FYS at all, you must remember not to leave the throttle at a high voltage level once you have stopped the engine to run the FYS. Otherwise, the engine without FYS will begin vibrating on the track as its motors strain to move the train, since they cannot be automatically disabled during the FYS cycle. If the second engine is an original Proto-Sound engine equipped with FYS, you may choose to disable it when used in double-heading operations, so you will not experience competing FYS sounds. To disable FYS in an original Proto-Sound engine, see the operating instructions for that engine.
- FYS can be triggered from Neutral. It will operate the same as if triggered while in motion except that, at the conclusion of the FYS, the engine will depart in the next direction of travel, as opposed to the direction it was traveling before entering Neutral.

## Proto-Coupler® Operation

This locomotive is equipped with a coil-wound Proto-Coupler for remote uncoupling action. Because the Proto-Coupler is controlled through the Proto-Sound 2.0 microprocessor, it does not require an uncoupling track section or modification to your layout to function. You can fire the couplers from neutral or while in motion. Use the code shown below (and in the chart on pg. 5) to fire the coupler.

### Rear Coupler:

To fire the rear coupler, press the Bell button once followed immediately by three pushes of the Whistle/Horn button. The sound of the liftbar and air line depletion will play, and the knuckle will be released.

### Speed Control:

M.T.H. engines equipped with Proto-Sound 2.0 have speed control capabilities that allow the engine to maintain a constant speed up and down grades and around curves, much like an automobile cruise control. You can add or drop cars on the run, and the engine will maintain the speed you set.

While the engine is programmed to start with the speed control feature activated, you can opt to turn it off. This means the engine's speed will fall as it labors up a hill and increase as it travels downward. It is also affected by the addition or releasing of cars while on the run.

**To turn speed control on and off**, put the engine in neutral, then press the transformer's Whistle button one time then immediately press the Bell button two times. Two whistle blasts will indicate that the engine has made the change. Repeat the 1 whistle, 2 bells code to return it to the other state. **You will want to do this during the initial neutral upon start-up if you ever couple this engine to another engine that is not equipped with speed control to avoid damaging the motors in either engine.** Each time you shut down the engine completely, it will automatically turn speed control on.

*Note: When speed control is turned off, the Proto-Sound 2.0 system will limit the volume in order to operate more smoothly at lower voltages. Full volume is restored upon reactivating speed control.*

## **Lock into a Direction:**

You can lock your engine into a direction (forward, neutral, or reverse) so that it will not change directions. To do this, put the engine into the direction you want (or into neutral to lock it into neutral), run it at a very slow crawl (as slowly as it will move without halting), and quickly but firmly press the Whistle/Horn button once followed immediately by three presses of the Bell button. Two whistle blasts will indicate that the engine has made the change. The engine will not change direction (including going into neutral) until you repeat the 1 Whistle/Horn, 3 bells code to return the engine to its normal condition, even if the engine is kept without power for extended periods of time.

## **Reset to Factory Defaults:**

To override the settings you currently have assigned to the engine and reset it to its factory defaults, while in Neutral press the Whistle/Horn button once, followed immediately by five quick pushes of the Bell button. Two whistle blasts will indicate that the engine has made the change.

## **Automatic Sounds:**

Certain Proto-Sound 2.0 sound effects automatically play in programmed conventional mode conditions:

**Squealing Brakes** play any time the engine's speed decreases rapidly.

**Cab Chatter** plays at random intervals when the engine idles in neutral.

**Engine Start-up and Shut-down** sounds play when the engine is initially powered on or is powered off for five seconds or more.


# Maintenance

## ProtoSmoke® Unit Operation

This Premier steam locomotive contains a self-powered smoke unit that outputs smoke through the smokestack on the roof of the engine. The smoke unit is essentially a small heating element and wick that soaks up and then heats a mineral oil-based fluid that emits a harmless smoke. The smoke is then forced out of the stack by a small electric fan. Smoke volume is controlled by the Proto-Sound 2.0 system.

With a few easy maintenance steps, you should enjoy trouble-free smoke unit operation for years.

When preparing to run this engine, add 15-20 drops of smoke fluid through the smokestack (see Fig. 3). We recommend M.T.H. ProtoSmoke, Seuthe, LGB, or LVTS fluids. Do not overfill the unit or the fluid may leak out and coat the interior engine components.

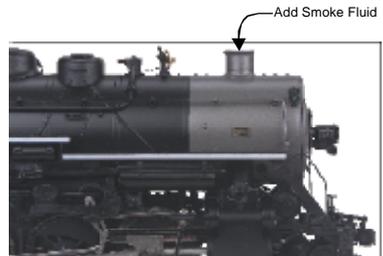

*Figure 3. Add Smoke through the Smokestack*

If you choose not to add the fluid (or have already added the fluid but choose to run smoke-free), turn off the smoke unit switch located under the water hatch (see Fig. 4). **Failure either to add fluid to the unit or to turn it off may damage the smoke unit heating element and/or wick material.**



*Figure 4. Smoke Unit ON/OFF Switch*

When the smoke output while running the engine begins to diminish, add another 10-15 drops of smoke fluid or turn the smoke unit off.


When storing the unit for long periods of time, you may want to add about 15 drops of fluid to prevent the wick from drying out.

After removing the engine from storage, add another 25 drops of fluid, letting the wick soak up the fluid for 15 minutes prior to operation.


If you experience poor or no smoke output when the smoke unit is on and has fluid, check the wick to see if it has become hard, blackened, and unabsorbent around the heating element. To remove the smoke unit you will first have to remove the boiler shell (by removing the body mounting screws shown in Fig. 7a on pg. 12), board and bracket that block the smoke unit assembly from being accessed. To do this, follow these instructions:

1. Unplug the two wiring harnesses from the board mounted to the inside of the boiler and behind the smoke unit.
2. Pry the board away from the bracket using a small screwdriver.
3. With the board free of the bracket, use a phillips head screwdriver to remove the bracket from the inside of the boiler shell (see figure 5a).
4. Set the board and the bracket aside, unscrew the one screw holding the smoke unit assembly from the boiler shell. Slide the smoke unit assembly all the way towards the back of the boiler to free it. Once the unit is freed, remove the inspection cover (Fig. 5b). Inspect the wick; if it is darkly discolored and hard, it should be replaced.

Replacement parts and wick replacement instructions are available directly from the M.T.H. Parts Department:

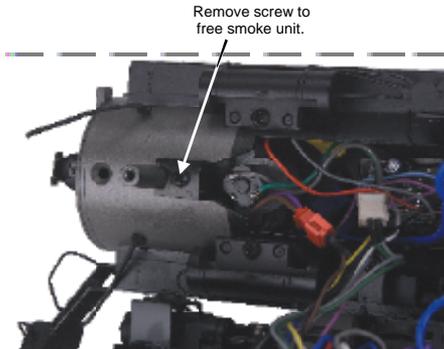

*Figure 5a. Accessing the Smoke Unit*

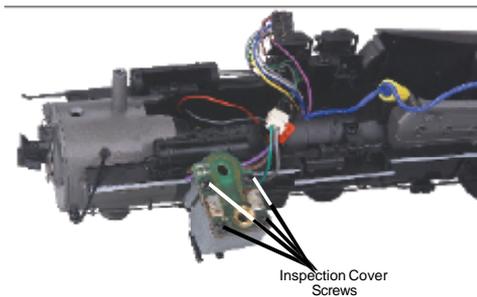

*Figure 5b. Inspecting the Smoke Unit*

# Lubrication and Greasing Instructions

The engine should be well oiled and greased in order to run properly.

You should regularly lubricate all side rods, linkage components and pickup rollers to prevent them from squeaking. Use light household oil and follow the lubrication points marked “L” in Fig. 6. Do not over-oil. Use only a drop or two on each pivot point.

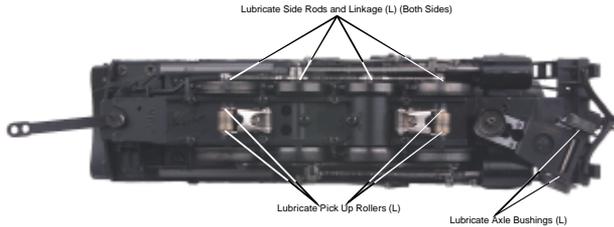


Figure 6. Lubrication Points on the Locomotive

The locomotive’s internal gearing was greased at the factory and should not need additional grease until after 50 hours of operation or one year, whichever comes first. To access the gear box and axles, do the following:

1. Turn the engine upside down.
2. Remove the boiler by removing the body mounting screws shown in Fig. 7a
3. Remove the Phillips screw (marked “GREASE”) located at each set of wheels (Fig. 7a).
3. Use a grease tube dispenser to put a small amount (approx. 1-2 ml.) of lithium-based grease into the gearbox and axles.
4. Replace the screws and reassemble the boiler.

You should also grease the leading and trailing locomotive truck tongues to enhance their ability to slide on the chassis. Follow the grease points shown on Fig. 7

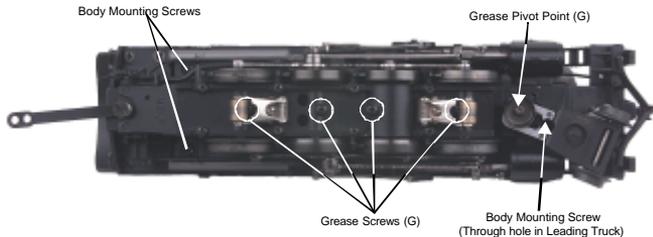


Figure 7 Location of Body Mount Screws and Greasing Points on the Locomotive

Periodically check the locomotive wheels and pickups for dirt buildup, which can cause poor electrical contact and traction as well as prematurely wear out the neoprene traction tires.

## **Traction Tire Replacement Instructions**

Your locomotive is equipped with two neoprene rubber traction tires on the rear set of flanged drivers. While these tires are extremely durable, you may need to replace them at some point.

1. Remove the side rods from the wheels in order to slip the new tire over the grooved drive wheel. Make sure to note the position of all rods before removing.
2. Make sure the old tire has been completely removed from the groove in the drive wheel, using a razor blade or small flathead screwdriver to pry away any remains.
3. Slip the new tire onto the wheel. You may find it useful to use two small flathead screwdrivers to stretch the tire over the wheel.
4. If you twist the tire while stretching it over the wheel, you will need to remove and reinstall the tire. Otherwise your engine will wobble while operating.
5. Make sure the tire is fully seated inside the groove. Use a razor blade to trim away any excess tire that doesn't seat itself inside the groove properly.
6. Reinstall the side rods in the same positions as noted. Failure to align rods may cause binding or damage to the drive system.

One set of replacement tires is included with your model. Additional sets are available directly from the M.T.H. Parts Department.


## Light Replacement Instructions

The locomotive's lights are controlled by a constant voltage circuit in the engine. They are easy to remove and replace when they burn out. See the diagrams and directions below for instructions on accessing and replacing the light bulbs in this locomotive.

You can obtain replacement bulbs directly from the M.T.H. Parts Department (phone: 410-381-2580; e-mail: parts@mth-railking.com; mail: 7020 Columbia Gateway Drive, Columbia MD 21046-1532)

### Headlight:


1. To replace the headlight in this model you will need to remove the boiler shell as shown in figure 7 on pg. 12.
2. Gently pull the wires connected to the lights out until you can access the wire connectors, and unplug the connectors. (See Figure 8a)
3. To replace the white headlight, open the smoke box door then gently pull the wires until the bulb comes free of the housing. Push the new bulb into place and reconnect the wires.

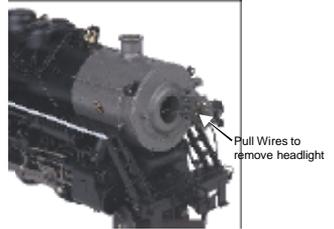

*Figure 8a. Replacing the Headlight*

### Firebox and Cab Interior Lights:

1. Remove the boiler from its chassis as shown in Fig. 7a on pg. 12.
2. Unplug the black wires from their connector (see figure 8b).
3. Remove the firebox light bulb by pulling it down and out of its bracket. You may find it easier to unscrew the bracket from the boiler before removing the bulb. Replace the bulb by pushing it up and into the bracket. You may need to use small pliers to do this.

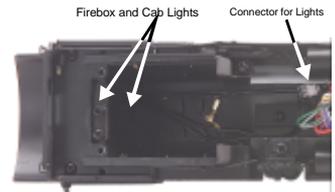

*Figure 8b. Firebox and Cab Lights*

4. Remove the cab interior light by pulling gently on the wire until the bulb comes free of its housing. Push the replacement bulb into position.

5. Reassemble in reverse order, being careful not to pinch any wires.

### **Tender Light:**

1. Remove the body from the chassis by removing the 6 screws shown in Fig. 9.

2. Unplug the wire from the connector.

3. Unscrew the bracket that houses the light bulb from inside the tender.

4. Gently pull the bulb to remove it and push the replacement bulb into place.

5. Reassemble in reverse order, being careful not to pinch any wires.



*Figure 9. Screws to remove the tender shell*

# Self-Charging Battery Back-Up


The special NiCad 7-cell 8.4v self-charging battery recharges continuously during train operation and should last for up to five years. The battery is a dry battery that should not leak or cause any damage to your engine. Depending upon when your engine was built, it may need to be charged right out of the box. If engine sounds seem distorted or garbled at low voltages or become silent when power from the transformer is turned off, test the battery to determine whether it should be recharged or replaced.

**Test:** Put the engine in neutral and leave the track voltage at 10-12 volts (high enough for the lights to shine brightly and the engine to move steadily) for 15 minutes.

**Recharge:** If the sounds are improved at the end of the 15-minute test charge, the battery charge has run down and can be recharged. There are a number of ways you can do this:

- Leave the engine in neutral with track voltage at 10-12 volts for 6-7 hours so the battery can fully recharge (if your engine has a smoke unit, be sure it is turned off).
- Use M.T.H.'s battery recharger (sold separately) that plugs into a wall outlet and a special port under the engine to recharge the battery overnight without leaving it on the track.

**Replace:** If the sounds are not improved at the end of the 15-minute test charge, it is time to replace the battery. Available through M.T.H. Parts. A standard 9v alkaline battery can be substituted until your replacement arrives, but since alkaline batteries cannot be recharged, it will eventually wear down. Do NOT use a 6-cell 7.2v battery.

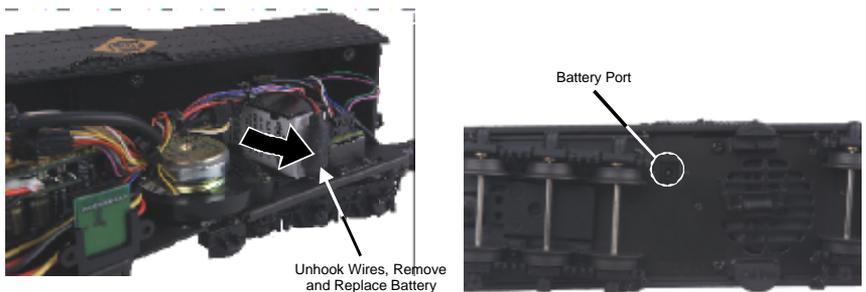

*Figure 11. Replacing the Battery*

## Troubleshooting Proto-Sound® 2.0 Problems

Although Proto-Sound 2.0 has been designed and engineered for ease of use, you may have some questions during initial operation. The following table should answer most questions. If your problem cannot be resolved with this table, contact M.T.H. for assistance (telephone: 410-381-2580; fax: 410-423-0009; service@mth-railking.com, 7020 Columbia Gateway Drive, Columbia MD 21046-1532).

| <b>Starting Up</b>  | <b>Remedy</b>  |
|---|--|
| When I first turn the power on, the engine will not begin to run. I have to turn the throttle off and then on again to get the engine to operate. | This is normal behavior. To prevent accidental high-speed start-ups, Proto-Sound 2.0 is programmed to start up in neutral anytime track power has been turned off for several seconds. See the "Basic Operation" section for more details. |
| <b>Whistle/Horn</b>   | <b>Remedy</b>  |
| When I press the whistle/horn button, the bell comes on instead.  | Reverse the transformer leads.   |
| I can't get the horn to blow when I press the whistle button.   | You may be pressing the button too quickly. Try pressing the whistle/horn button more slowly, taking approximately one full second to fully depress the button.  |
| <b>Bell</b>   | <b>Remedy</b>  |
| When I press the whistle button, the bell sounds.   | Reverse the transformer leads.   |
| I can't get the bell to ring when I press the bell button.  | You may be pressing the button too quickly. Try pressing the bell button more slowly, taking approximately one full second to fully depress the button.  |
| The bell won't work on a separate bell button.  | Check the wiring of the separate button.   |
| <b>Coupler</b>  | <b>Remedy</b>  |
| When I try to fire the coupler, FYS starts.   | You are waiting too long between whistle button presses.   |
| The Proto-Coupler won't let the engine uncouple on the fly.   | Try lubricating the coupler knuckle with a dry graphite lubricant. Do NOT use oil.   |
| The coupler does not fire or stay coupled.  | The coupler needs to be cleaned. Wipe with denatured alcohol (not rubbing alcohol) and let dry.  |

| <b>Cab Chatter</b>  | <b>Remedy</b>   |
|---|---|
| Sometimes the Cab Chatter sounds don't play.  | Cab Chatter plays only in neutral at random intervals.  |
| <b>Lock-out</b>   | <b>Remedy</b>   |
| I can't get the engine to run after I power up the transformer. It sits still with the engine sounds running. | The engine is locked into the neutral position. Follow the procedure in the "Lock into a Direction" section.  |
| The engine won't lock into forward, neutral, or reverse.  | Engine speed must be below 10 scale mph (approx. 10 volts or less in conventional mode).  |
| <b>Volume</b>   | <b>Remedy</b>   |
| The sounds seem distorted, especially when the whistle or bell is activated.                                  | Proto-Sound 2.0 volume is set too high. Turn the volume control knob on the bottom of the chassis counter-clockwise to reduce the volume.   |
| <b>Battery</b>  | <b>Remedy</b>   |
| The engine will not leave the initial neutral setting.  | Check to be sure the battery is installed and fully charged. See the "Self-Charging Battery Back-Up" section.   |
| I get no sounds when the engine shifts between directions.  | The battery may be dead or need to be charged. See the "Self-Charging Battery Back-Up" section.   |
| After I turn off my transformer, my engine continues to make sounds before quitting.                          | Proto-Sound 2.0 is designed to continue to sound for a few seconds after power to the track has been shut off.  |
| <b>FYS</b>  | <b>Remedy</b>   |
| The FYS sounds occasionally repeat themselves.  | Proto-Sound 2.0 has a built-in random number generator that randomly selects each sound clip to play. Because there are a limited number of sound clips available in each FYS sequence, it is probable that some of these sound clips will be repeated from time to time. |

| FYS  | Remedy  |
|--|---|
| Once in FYS, the engine doesn't go into reverse.   | So that FYS effects can be as realistic as possible, Proto-Sound 2.0 disables the reversing unit whenever FYS is enabled. This way the engine remains still at its stop as the operator cycles through the FYS sequences. |
| When the FYS enters its last sequence the bell automatically comes on.   | FYS is programmed to start ringing the bell at that point. After approximately 12 rings of the bell, it will automatically turn off.  |
| When FYS is enabled, pressing the whistle and bell buttons has no effect.  | Because FYS must control various effects in each sequence, Proto-Sound 2.0 takes control of these sound effects until you exit FYS.   |
| I push the direction button but the next sound clip in the sequence does not play or the engine does not come out of FYS after fourth press of the direction button. | Each FYS clip must play for approx. 30 seconds before FYS will advance to the next step in the FYS cycle. Wait at least 30 seconds in each FYS sound clip before pressing the direction button.                           |

## Compatibility

This engine will operate on any traditional Q<sub>M</sub>-31 Gauge track system, including M.T.H.'s RealTrax<sup>®</sup> or ScaleTrax<sup>™</sup> or traditional tubular track. It is also compatible with most standard AC transformers. (See page 20 for a complete list of compatible transformers and wiring instructions.)

# Transformer Compatibility and Wiring Chart

Proto-Sound 2.0 is designed to work with most standard AC transformers. The chart below lists the many compatible transformers. Note that many of the operational commands described in these instructions require a bell button, so if your transformer does not have its own bell button, you should consider adding one to get the full benefit of the system. In addition, the chart details how the terminals on these transformers should be attached to your layout.

| Transformer Model                     | Center Rail            | Outside Rail          | Min/Max. Voltage | Power Rating | Transformer Type |
|---------------------------------------|------------------------|-----------------------|------------------|--------------|------------------|
| MTH Z-500                             | Red Terminal           | Black Terminal        | 0-18v            | 50-Watt      | Electronic       |
| MTH Z-750                             | Red Terminal           | Black Terminal        | 0-21v            | 75-Watt      | Electronic       |
| MTH Z-4000                            | Red Terminal           | Black Terminal        | 0-22v            | 390-Watt     | Electronic       |
| Lionel 1032                           | U                      | A                     | 5-16v            | 90-Watt      | Standard         |
| Lionel 1032M                          | U                      | A                     | 5-16v            | 90-Watt      | Standard         |
| Lionel 1033                           | U                      | A                     | 5-16v            | 90-Watt      | Standard         |
| Lionel 1043                           | U                      | A                     | 5-16v            | 90-Watt      | Standard         |
| Lionel 1043M                          | U                      | A                     | 5-16v            | 90-Watt      | Standard         |
| Lionel 1044                           | U                      | A                     | 5-16v            | 90-Watt      | Standard         |
| Lionel 1053                           | U                      | A                     | 8-17v            | 60-Watt      | Standard         |
| Lionel 1063                           | U                      | A                     | 8-17v            | 60-Watt      | Standard         |
| All-Trol                              | Left Terminal          | Right Terminal        | 0-24v            | 300-Watt     | Electronic       |
| Dallee Hostler                        | Left Terminal          | Right Terminal        |                  |              | Electronic       |
| Lionel LW                             | A                      | U                     | 8-18v            | 75-Watt      | Standard         |
| Lionel KW                             | A or B                 | U                     | 6-20v            | 190-Watt     | Standard         |
| Lionel MW                             | Outside Track Terminal | Inside Track Terminal | 5-16v            | 50V.A.       | Electronic       |
| Lionel RS-1                           | Red Terminal           | Black Terminal        | 0-18v            | 50V.A.       | Electronic       |
| Lionel RW                             | U                      | A                     | 9-19v            | 110-Watt     | Standard         |
| Lionel SW                             | U                      | A                     | Unknown          | 130-Watt     | Standard         |
| Lionel TW                             | U                      | A                     | 8-18v            | 175-Watt     | Standard         |
| Lionel ZW                             | A,B,C or D             | U                     | 8-20v            | 275-Watt     | Standard         |
| Lionel Post-War Celebration Series ZW | A,B,C or D             | Common                | 0-20v            | 135/190 Watt | Electronic       |

\* Conventional Mode Only

## **Additional Features with the DCS Remote Control System:**

While conventional mode operation of a Proto-Sound 2.0 engine yields wonderfully realistic sound and several train control features, command mode operation allows the user to access a world of command functions never before accessible to O Gauge railroaders. With the addition of the DCS Remote Control System (including a DCS remote handheld and Track Interface Unit) users gain many advanced features, including:

- DCS Proto-Speed Control - Establishes desired locomotive speed in scale miles per hour increments via a thumbwheel control and allows operator to set maximum speed and acceleration/deceleration rates
- ProtoSmoke<sup>®</sup> Variable Output Control - Controls how much smoke each engine outputs and matches smoke to locomotive speed
- Locomotive Lighting Control - Controls locomotive headlights, marker and interior lights, beacon lights, ditch lights, and MARS lights
- Emergency Stop-Single button push stops all Proto-Sound 2.0 trains but does not turn off the power
- One Touch Global Mute/UnMute-Single button mutes or unmutes all DCS-controlled locomotives' user-defined actions, including sound, lights, and smoke
- Proto-Dispatch Operation-Public Address-like feature allows users to speak through locomotive speaker during operation
- Proto-Cast-Allows users to play audio recordings through locomotive speaker during operation
- Proto-Doppler Sound Effects Set Up-Users can configure locomotive for Doppler Operation, including setting distance points for Doppler start, repeat, and stop modes
- Independent Volume Control of Engine Sounds, Bell, Horn & Whistle for each Locomotive
- Control up to 50 different DCS-Equipped Locomotives at one time with multiple TIUs

- Proto-Effects™ Set Up-User can select individual Proto-Effects™ operations to be active or inactive, including cab chatter, train wreck sounds, coupler sounds, and wheel clickety-clack sounds
- Direction Control Set Up-User can set initial individual start-up direction (start in forward or reverse) for double-heading operations
- Locomotive Consist Set-up-User can determine locomotive values for consist make-ups, allowing multiple locomotives belonging to a consist to operate together
- Query Locomotive Information-User can query locomotive programming to learn locomotive address and engine data information, including scale miles traveled
- User Can Query, Set and Operate Track and Accessory Interface Units for Programming Digital Command Operations for up to 250 Accessories and 250 Individual Switches
- User Can Script, Record and Playback Train Routes

Operating instructions for all DCS Command features will accompany the DCS remote control equipment.

## **CAUTION: Electrically Operated Product:**

**Not recommended for children under 10 years of age. M.T.H. recommends adult supervision with children ages 10 - 16. As with all electric products, precautions should be observed during handling and use to reduce the risk of electric shock.**

**WARNING:** When using electrical products, basic safety precautions should be followed including the following:

- Read this manual thoroughly before using this device.
  
- M.T.H. recommends that all users and persons supervising use examine the hobby transformer periodically for conditions that may result in the risk of fire, electric shock, or injury to persons, such as damage to the primary cord, plug blades, housing, output jacks or other parts. In the event such conditions exist, the transformer should not be used until properly repaired.
  
- As with all electrical appliances, this product should not be left in operation when unattended.

# Service & Warranty Information

## How to Get Service Under the Terms of the Limited One-Year Warranty

When you suspect an item is defective, please check the operator's manual for standard operation and trouble-shooting techniques that may correct the problem. Additional information may be found on the M.T.H. Website. Should you still require service, follow the instructions below to obtain warranty service.

First, e-mail, write, call or fax a M.T.H. Authorized Service Center (ASC) in your area to obtain Repair Authorization. You can find the list of ASCs on the M.T.H. Website, [www.mth-railking.com](http://www.mth-railking.com). Authorized Service Centers are required to make warranty repairs on items sold *only* from that store; all other repairs may- or may not be done at the store's own discretion. If you did not purchase the item directly from the ASC, you will need to select a National Authorized Service Center (NASC). These centers are compensated by M.T.H. to perform warranty service for any customer whose repair qualifies for warranty service. A list of NASC retailers can be located on the M.T.H. Website or by calling 1-888-640-3700. Should the warranty no longer apply, you may choose either an ASC or NASC retailer to service your M.T.H. Product. A reasonable service fee will be charged.

**CAUTION:** Make sure the product is packed in its original factory packaging including its foam and plastic wrapping material to prevent damage to the merchandise. There is no need to return the entire set if only one of the components is in need of repair *unless otherwise instructed by the Service Center. **The shipment must be prepaid and we recommend that it be insured. A cover letter including your name, address, daytime phone number, e-mail address (if available), Return Authorization number (if required by the service center, a copy of your sales receipt and a full description of the problem must be included to facilitate the repairs. Please include the description regardless of whether you discussed the problem with a service technician when contacting the Service Center for your Return Authorization.***

Please make sure you have followed the instructions carefully before returning any merchandise for service. Authorized M.T.H. Service Centers are independently owned and operated and are not agents or representatives of M.T.H. Electric Trains. M.T.H. assumes no responsibility, financial or otherwise, for material left in their possession, or work done, by privately owned M.T.H. Authorized Service Centers.

If you need assistance at any time email MTH Service at [service@mth-railking.com](mailto:service@mth-railking.com), or call 410 381-2580.

## Limited One-Year Warranty

**All M.T.H. products purchased from an Authorized M.T.H. Train Merchant are covered by this warranty.**

See our website at [www.mth-railking.com](http://www.mth-railking.com) or call 1-888-640-3700 to identify an Authorized M.T.H. Train Merchant near you.

M.T.H. products are warranted for one year from the date of purchase against defects in material or workmanship, excluding wear items such as light bulbs, pick-up rollers, batteries, smoke unit wicks, and traction tires. We will repair or replace (at our option) the defective part without charge for the parts or labor, if the item is returned to an M.T.H. Authorized Service Center (ASC) or M.T.H. National Authorized Service Center (NASC) within one year of the original date of purchase. This warranty does not cover damages caused by improper care, handling, or use. Transportation costs incurred by the customer are not covered under this warranty.

Items sent for repair must be accompanied by a return authorization number, a description of the problem, and a **copy of the original sales receipt from an Authorized M.T.H. Train Merchant**, which gives the date of purchase. If you are sending this product to an Authorized Service Center, contact that Center for their return authorization.

This warranty gives you specific legal rights, and you may have other rights that vary from state to state. Specific questions regarding the warranty may be forwarded to M.T.H. directly.

Service Department  
M.T.H. Electric Trains  
7020 Columbia Gateway Drive  
Columbia MD 21046-1532



# AUTHORIZED SERVICE CENTER

7020 Columbia Gateway Dr. - Columbia, MD 21046

Information: 410-381-2580 Fax: 410-381-6122

www.mth-railking.com

## PARTICIPATING N.A.S.C. RETAILER LIST

### CANADA

TOY TRAIN WORKSHOP  
CUMBERLAND  
613-833-8331

THE TRAIN ROOM  
FERGUS  
519-787-3280

### CALIFORNIA

TIN PLATE JUNCTION  
OAKLAND  
510-444-4780

### COLORADO

MIZELL TRAINS INC  
WESTMINSTER  
303-429-4811

### CONNECTICUT

NEW ENGLAND HOBBY  
SUPPLY  
MANCHESTER  
860-646-0610

### FLORIDA

ROUNDHOUSE SOUTH  
PORT ORANGE  
386-304-7002

### MARYLAND

PLAZA HOBBY  
CUMBERLAND  
301-729-6424

ENGINE HOUSE HOBBIES  
GAITHERSBURG  
301-590-0816

CATOCTIN MOUNTAIN TRAINS  
& HOBBIES  
THURMONT  
301-694-8331

### MICHIGAN

MICHIGAN MODEL TRAIN  
CENTER  
PINCKNEY  
734-426-1651

BRASSEUR ELECTRIC TRAINS  
INC.  
SAGINAW  
989-793-4753

### NEW HAMPSHIRE

TREASURED TOYS  
SALEM  
603-898-7224

### NEW YORK

AURORA RAILS & HOBBIES  
EAST AURORA  
716-652-5718

### OHIO

DAVIS ELECTRONICS  
MILFORD  
513-831-6425

RICK'S TOY TRAINS  
TOLEDO  
419-478-0171

### PENNSYLVANIA

BUSSINGER TRAINS  
AMBLER  
215-628-2366

FAIRCHANCE PHARMACY  
FAIRCHANCE  
724-564-7817

TOBY TYLER'S HOBBY  
CENTER  
PITTSBURGH  
412-653-5030

### VIRGINIA

LOCUST GROVE TRAINS  
LOCUST GROVE  
540-854-8955

DAVIS HOBBY SUPPLIES  
PORTSMOUTH  
757-397-1983

T S G HOBBIES  
WARRENTON  
540-347-9212

### WISCONSIN

SOMMERFELD'S TRAINS  
BUTLER  
262-783-7797

GRAMPA'S TRAIN SHOP  
RICE LAKE  
715-234-2996



## PARTICIPATING A.S.C. RETAILER LIST

### CANADA

TOY TRAIN WORKSHOP  
CUMBERLAND  
613-833-8331

THE TRAIN ROOM  
ERGUS  
519-787-3280

CREDIT VALLEY RAILWAY  
COMPANY  
STREETSVILLE  
905-826-1306

B H TRAINS  
TERREBONNE  
450-492-0317

ALABAMA  
SOUTHERLAND STATION  
HUNTSVILLE  
256-533-4720

LIL' BOBBY'S HOBBIES  
MONTGOMERY  
334-277-1715

ARIZONA  
ARIZONA TRAIN DEPOT  
MESA  
480-833-9486

CALIFORNIA  
CENTRAL COAST TRAINS  
ATASCADERO  
805-466-1391

TRAIN SHACK  
BURBANK  
818-842-3330

ROUNDHOUSE  
NORTH HOLLYWOOD  
818-769-0403

DOLLHOUSES TRAINS & MORE  
NOVATO  
415-883-0388

TIN PLATE JUNCTION  
OAKLAND  
510-444-4780

RON'S WORLD  
SAN CLEMENTE  
949-361-5596

TRUCKS & TRAINS HOBBIES  
SANTA ROSA  
707-537-6586

COLORADO  
CUSTOM RAILWAY SUPPLY  
COLORADO SPRINGS  
719-634-4616

CABOOSE HOBBIES  
DENVER  
303-777-6766

MIZELL TRAINS  
WESTMINSTER  
303-429-4811

CONNECTICUT  
NEW ENGLAND HOBBY  
SUPPLY

MANCHESTER  
860-646-0610

FLORIDA  
HOLLYWOOD STATION  
HOLLYWOOD  
954-921-2700

DEPOT HOBBY SHOP  
LAKE WORTH  
561-585-1982

READY TO ROLL  
MIAMI  
305-688-8868

FRANK'S TRAINS & HOBBIES  
OLDSMAR  
813-855-1041

COLONIAL PHOTO & HOBBY  
ORLANDO  
407-841-1485

WARRICK CUSTOM HOBBIES  
PLANTATION  
954-370-0708

ROUNDHOUSE SOUTH  
PORT ORANGE  
386-304-7002

ILLINOIS  
BIKE & CHOO CHOO  
CONNECTION  
SCHAUMBURG  
847-882-7728

INDIANA  
Y. O. R. K. TRAINS  
MUNSTER  
219-838-9999

SAMUELSON'S TRAIN SHOP  
VALPARAISO  
219-462-2708

IOWA  
CABOOSE STOP HOBBIES  
CEDAR FALLS  
800-642-7012

KENTUCKY  
L&N TRAINS & THINGS  
LOUISVILLE  
502-897-9005

LOUISIANA  
AMERICA'S TRAIN YARD  
BATON ROUGE  
225-926-5592

**MAINE**

WHEELS, WINGS & THINGS  
LUDLOW  
207-532-6277

**MARYLAND**

PLAZA HOBBY  
CUMBERLAND  
301-729-6424

HOBBYTOWN U S A  
FREDERICK  
301-694-7395

ENGINE HOUSE HOBBIES  
GAITHERSBURG  
301-590-0816

J & B TRAINS  
HAGERSTOWN  
240-420-4930

THE TRAIN ROOM  
HAGERSTOWN  
301-745-6681

PURKEY'S TOY TRAINS  
SYKESVILLE  
410-549-6061

CATOCTIN MOUNTAIN TRAINS  
& HOBBIES  
THURMONT  
301-694-8331

**MASSACHUSETTS**

NORTHEAST TRAINS  
PEABODY  
978-532-1615

EAST BAY HOBBIES  
SEEKONK  
508-336-5573

**MICHIGAN**

MICHIGAN MODEL TRAIN  
CENTER  
PINCKNEY  
734-426-1651

BRASSEUR ELECTRIC TRAINS  
INC.  
SAGINAW  
989-793-4753

**MISSOURI**

SWITCHSTAND  
SAINT LOUIS  
314-781-4458

MARK TWAIN HOBBY CENTER  
ST. LOUIS  
636-946-2816

**NEVADA**

RENO RAILS  
RENO  
775-337-6669

**NEW HAMPSHIRE**

RAILROAD SPECIALTIES  
NASHUA  
603-801-0801

**TREASURED TOYS**

SALEM  
603-898-7224

**NEW JERSEY**

COUNTRY AND STUFF  
ANDOVER  
973-786-7086

COLUMBUS TRAIN STATION  
COLUMBUS  
609-518-1800

ATLANTIC RAILS  
HAMMONTON  
609-567-8490

GRAND CENTRAL STATION  
KEARNY  
201-955-6200

J & B TRAINS, INC.  
MAPLE SHADE  
856-414-0092

HOBBY SHOP  
MATAWAN  
732-583-0505

HOBBYMASTERS, INC  
RED BANK  
732-842-6020

RIDGEFIELD HOBBY  
RIDGEFIELD  
201-943-2636

TOM'S MODEL TRAINS  
SCOTCH PLAINS  
908-322-6122

TRAINS & THINGS  
TRENTON  
609-883-8790

COAST TRAINS AND  
COLLECTIBLES  
WALL  
732-556-9005

HOLLY BEACH TRAIN DEPOT  
WILDWOOD  
609-522-2379

**NEW YORK**

AURORA RAILS & HOBBIES  
EAST AURORA  
716-652-5718

NASSAU HOBBY CENTER, INC.  
FREEPORT  
516-378-9594

HOBBY WORLD  
MONTICELLO  
845-794-8770

CITY DEPOT, INC.  
NEW HAMPTON  
845-374-3010

SCAG'S ELECTRIC TRAINS  
STATEN ISLAND  
718-727-7373

**AMERICANA STORE**

TIVOLI  
845-757-4246

KROSS HARDWARE  
WEST BABYLON  
631-669-3069

**NORTH CAROLINA**

THE ROUNDHOUSE &  
BACKSHOP  
CARY  
919-465-0810

TRAINS LTD.  
CHARLOTTE  
704-566-9070

DRY BRIDGE STATION  
MOUNT AIRY  
336-786-9811

THE FREIGHT YARD  
SMITHFIELD  
919-934-6229

TRAIN LOFT  
WINSTON-SALEM  
336-760-9817

**OHIO**

GLEN'S TRAIN SHOP  
AKRON  
330-253-6527

E & S TRAINS  
AKRON  
330-745-0785

T & K HOBBY SHOP  
BRIDGEPORT  
740-633-6607

PARMA HOBBY  
CLEVELAND  
216-741-6440

SANDY'S HOBBY'S &  
COLLECTIBLES  
ELYRIA  
440-365-9999

HUDSON TOY, TRAIN &  
HOBBY  
HUDSON  
330-653-2997

CLEARVIEW TRAIN & HOBBY  
LORAIN  
440-277-4488

DIXIE UNION STATION  
MASON  
513-459-0460

DAVIS ELECTRONICS  
MILFORD  
513-831-6425

TRAINS-N- THINGS  
NORTH CANTON  
330-499-1666

GRAND PACIFIC JUNCTION  
OLMSTEAD FALLS  
440-235-4777

RICK'S TOY TRAINS  
TOLEDO  
419-478-0171

ERIE RAILWAY DEPOT  
TROY  
937-440-9972

**PENNSYLVANIA**  
AMERICAN HOBBY CENTER  
ALIQUIPPA  
724-378-3930

ALLENTOWN TOY TRAIN  
SERVICE  
ALLENTOWN  
610-821-0740

ON THE RIGHT TRACK  
ALTOONA  
814-942-4345

BUSSINGER TRAINS  
AMBLER  
215-628-2366

JIM'S HOBBY SERVICE  
BERWICK  
570-759-2695

YE OLDE TRAIN & CHRISTMAS  
SHOPPE  
BOYERTOWN  
610-369-0755

NICHOLAS SMITH  
BROOMALL  
610-353-8585

CHARLEROI SWEEPER  
CENTER  
CHARLEROI  
724-483-3397

CRANBERRY HOBBY DEPOT  
CRANBERRY TWP  
724-776-3640

FAIRCHANCE PHARMACY  
FAIRCHANCE  
724-564-7817

TOY TRAIN STATION  
FEASTERVILLE TREV  
215-322-5182

THE CABOOSE  
LEHIGHTON  
570-386-5352

HOBBY CITY  
MCMURRAY  
724-942-2557

THE STATION  
NEW CUMBERLAND  
717-774-7096

FRYER'S STORE  
ORWIGSBURG  
570-366-2258

CHESTNUT TOYBOX  
PHILADELPHIA  
215-545-0455

TOBY TYLER'S HOBBY  
CENTER  
PITTSBURGH  
412-653-5030

WILCOX GREENHOUSE &  
NURSERY  
TITUSVILLE  
814-827-3823

EASTERN DEPOT  
TROY  
570-297-1975

J&J RAILROAD CROSSING  
TURTLE CREEK  
412-824-6009

TRAINS R FUN  
LEESBURG  
703-779-8600

**SOUTH CAROLINA**  
EMERALD TRAIN & HOBBY  
GREENWOOD  
864-223-2247

**TENNESSEE**  
MODEL RAILROAD & HOBBY  
SHOP  
MEMPHIS  
901-384-6500

**TEXAS**  
HOBBY TIME  
AMARILLO  
806.352.9660

RIVERVIEW TRAINS  
ANGLETON  
979-848-3895

GREAT TRAINS & HOBBIES  
LONGVIEW  
903-757-2720

**VIRGINIA**  
LEESBURG HOBBIES  
LEESBURG  
703-779-8600

LOCUST GROVE TRAINS  
LOCUST GROVE  
540-854-8955

TRAIN DEPOT  
MANASSAS  
703-335-2216

CHESTERFIELD HOBBIES  
MIDLOTHIAN  
804-379-9091

DAVIS HOBBY SUPPLIES  
PORTSMOUTH  
757-397-1983

TOY TRAIN CENTER  
RICHMOND  
804-288-4475

NUTBUSH EXPRESS  
VICTORIA  
434-696-1902

T S G HOBBIES  
WARRENTON  
540-347-9212

NORGE STATION  
WILLIAMSBURG  
757-564-7623

**WASHINGTON**  
EASTSIDE TRAINS  
KIRKLAND  
425-828-4098

**WEST VIRGINIA**  
PATRICK'S TRAINS  
WHEELING  
304-232-0714

**WISCONSIN**  
WOODCRAFTERS SHOP  
BURLINGTON  
262-763-5239

SOMMERFELD'S TRAINS  
BUTLER  
262-783-7797

HOBBY OUTLET  
FOND DU LAC  
920-924-3770

G B T V & TRAINS  
GREEN BAY  
920-496-9697

GRAMPA'S TRAIN SHOP  
RICE LAKE  
715-234-2996

THE TRAIN STORE  
WAUKESHA  
262-650-6675